


RLC20HS

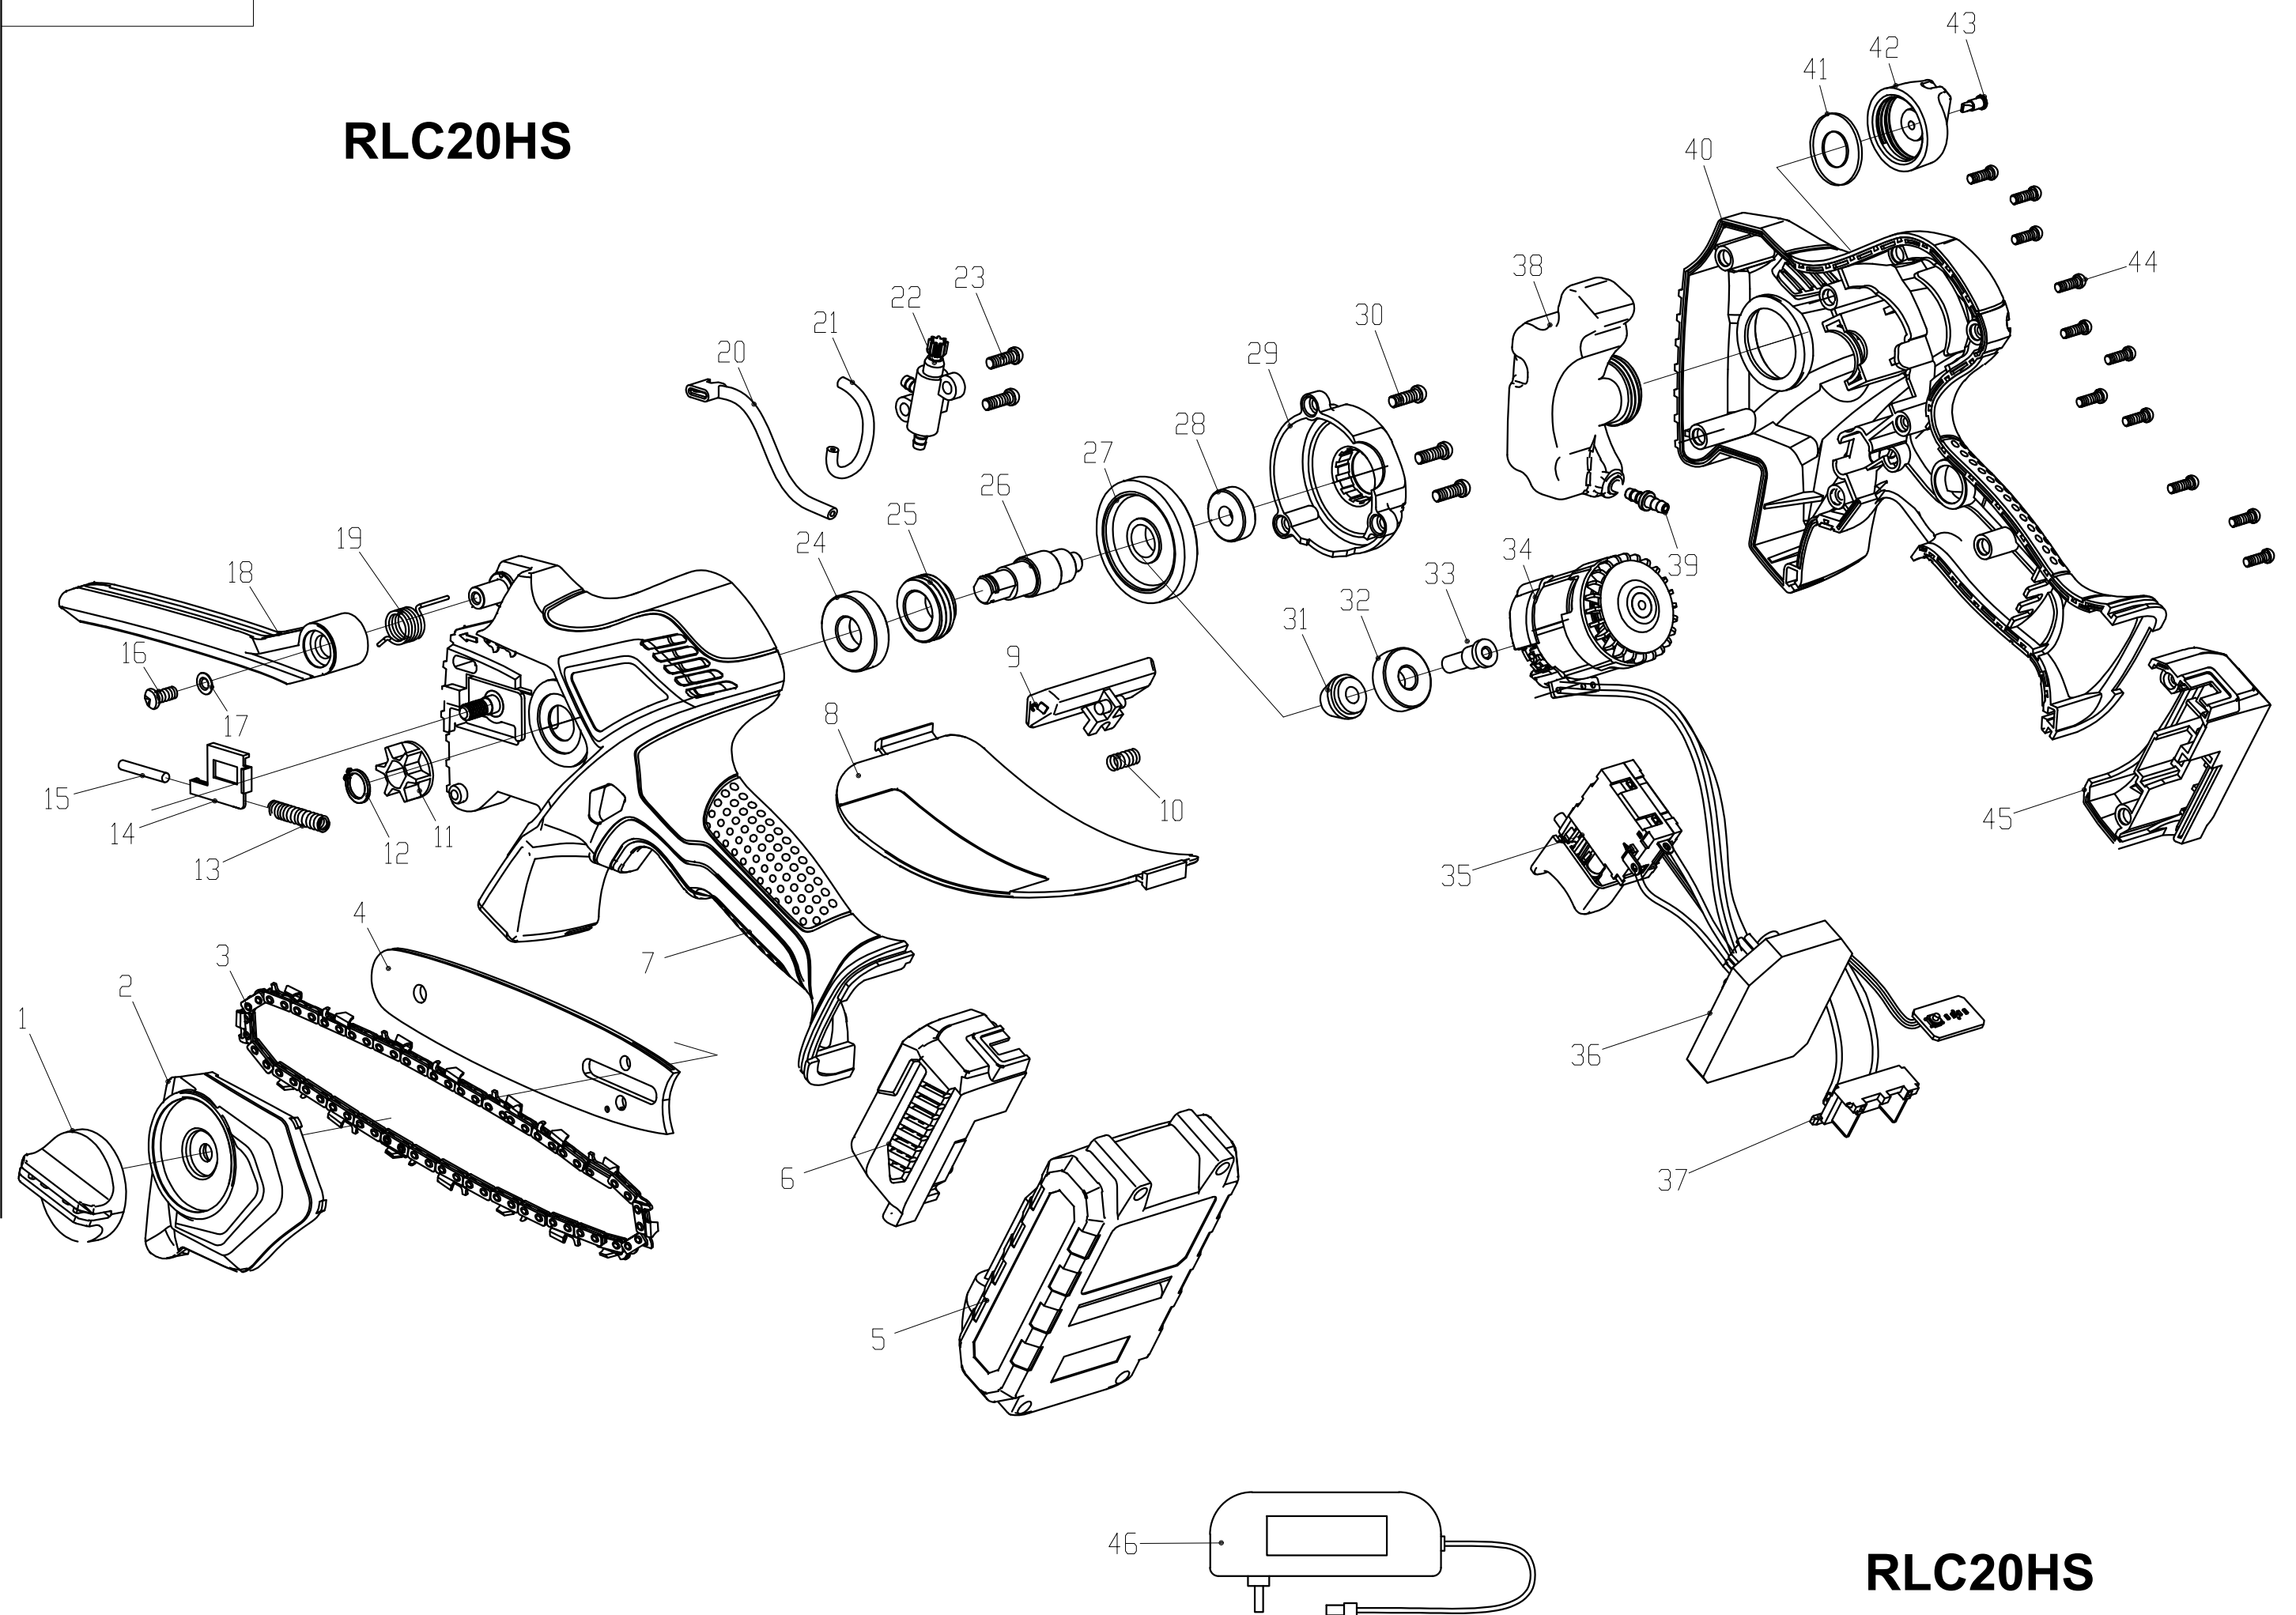

RLC20HS

LISTADO DE PIEZAS DE "RLC20HS"

No.	DESCRIPCION	Qtys
1	Bar Cover Rotary knob	1
2	Bar cover	1
3	chain	1
4	bar	1
5	battery	1
6	left battery cover adaptor	1
7	left engine cover	1
8	Finger guard	1
9	Switch lever	1
10	Anti-self-locking spring	1
11	sprocket	1
12	circlip for shaft 10MM	1
13	Tension sheet spring	1
14	Tension sheet	1
15	3 x40 cylindrical pin	1
16	Slotted pan head tapping screws ST4.2X12-F	1
17	Plain washers 4 x12x1. 5	1
18	Chain plate	1
19	button spring	1
20	fuel outlet tube	1
21	fuel inlet tube	1
22	oil pump	1
23	Slotted pan head tapping screws ST4.2X12-F	2

No.	(RLC20HS) DESCRIPCION	Qtys
24	16001 bearing	1
25	gear worm	1
26	output shaft	4
27	Big teeth	1
28	607 bearing	1
29	gear case	1
30	Slotted pan head tapping screws ST4.2X12-F	3
31	small teeth	1
32	608 bearing	1
33	Small cone gear shaft	1
34	brushless motor	1
35	Switch	1
36	Control unit	1
37	Battery pins	1
38	oil tank	1
39	fuel nozzle adapter	1
40	right engine cover	1
41	Oil cap cover washer	1
42	Oil cap	1
43	vent	1
44	Slotted pan head tapping screwsST2.9X9.5-F	11
45	Right battery pack adapter	1
46	Charger	1