

Despiece TF800


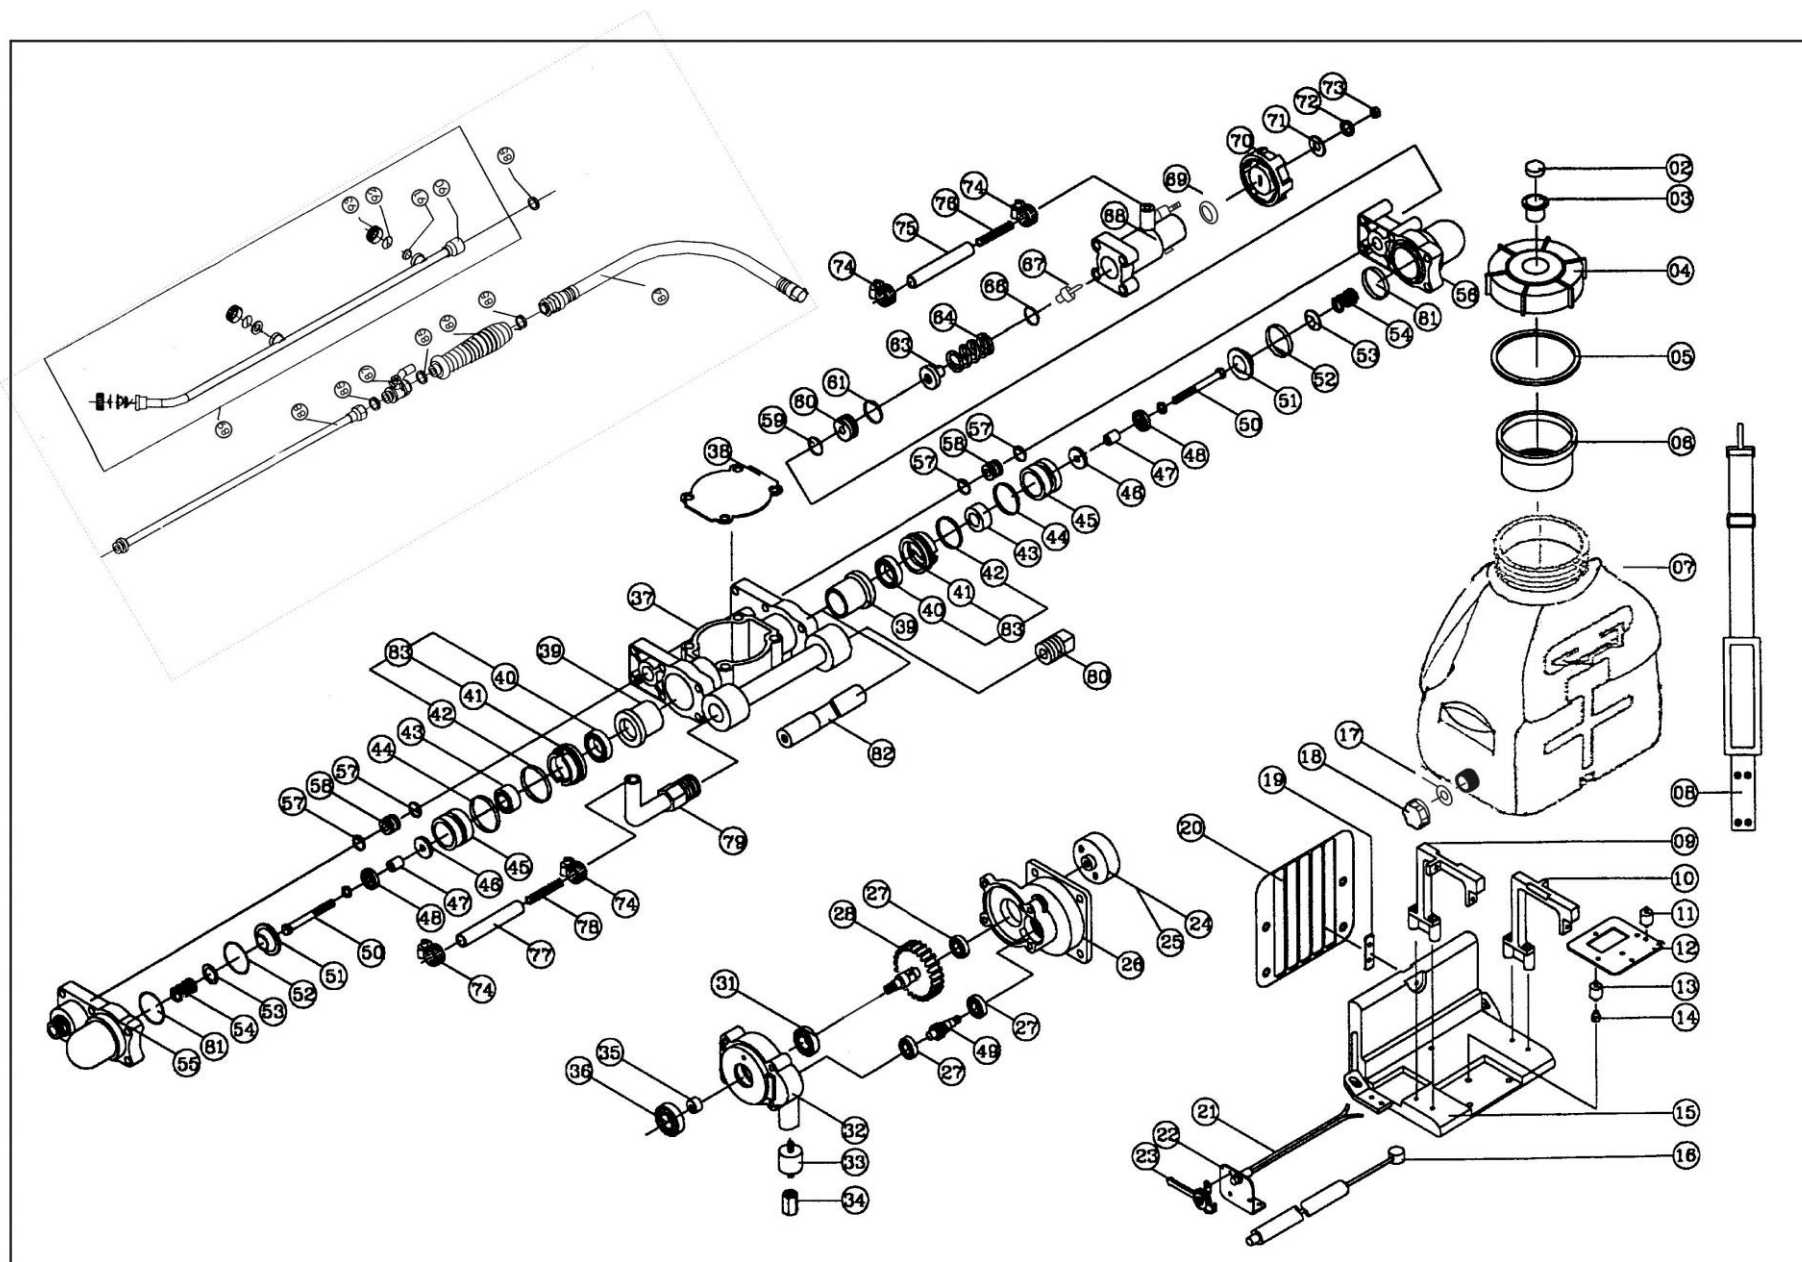


Fig 1. Power Sprayer Parts

ITEM	PARTS NAME	QTY	ITEM	PARTS NAME	QTY	ITEM	PARTS NAME	QTY
1-01	Cover Assy		1-31	Bearing(6001)	1	1-63	Under Metal	1
1-02	Sieve	1	1-32	Gear Box Cover	1	1-64	Spring	1
1-03	Cowl	1	1-33	Shake-Proof Plug 6mm	1	1-65	M5x25 Crossing Bolt	8
1-04	Hood	1	1-34	Pump Brecket	1	1-65-1	M5x50 Crossing Bolt	4
1-05	Seal	1	1-35	Shaft,,Eceentric	1	1-66	O-Ring 13x2	1
1-06	Sieve Filling	1	1-36	Bearing(6004)	1	1-67	Regulating Screw	1
1-07	Water Tank	1	1-37	Cylinder	1	1-68	Overflow Body	1
1-08	Back Belt Assy	1	1-38	Cover Dust	1	1-69	Fy Nut	2
1-09	Right Bracket	1	1-39	Bush Plunger	2	1-70	Adjusting Pan	1
1-10	Left Bracket	1	1-40	Water Seal	2	1-71	O8 Washer	1
1-11	Shake-Proof Plug 6mm	3	1-41	Seal,Water Seal	2	1-72	M8 Spring, Washer	1
1-12	Engine Seat	1	1-42	O-Ring 28x2	2	1-73	M8 Nut	1
1-12-1	Fixing Bracket 12-1	1	1-43	Water Seal	2	1-74	8/8 Clamp,Hose	4
1-13	M6X15 Screw Assy	3	1-44	O-Ring 26x2	2	1-75	Overflow Hose	1
1-14	Nut	1	1-45	Cylinder Bushing	2	1-76	Overflow Spring	1
1-15	Chair	1	1-46	Water Seal Box	2	1-77	Suchion Hose	1
1-16	Way	1	1-47	Tube,Screw Bush	2	1-78	Suction Spring	1
1-17	Washer	1	1-48	Water Seal Box	2	1-79	Joint	1
1-18	Warer Cock	1	1-49	Washer	2	1-80	Plug Hole	1
1-19	Coupling Metal	1	1-50	M5x30 Scrw	2	1-81	O-Ring 35x2.5	2
1-20	Pad Cushion	1	1-51	Valve seat	2	1-82	Plunger	1
1-21	Stop Switch	1	1-52	O-Ring 26x2	2	1-83	Water Seal Seat Assy	2
1-22	Lever Seat	1	1-53	Stop-per	2	1-84	Rubber Tube Assy	1
1-23	Lever	1	1-54	Spring Valve	2	1-85	Washer	4
1-24	IØ54 Clutch Drive	1	1-55	Discharge Metal	1	1-86	Handle	1
1-24-1	M6x25 Crossing Bolt Assy	2	1-56	Overflow Metal	1	1-87	Valve	1
1-25	M6x15 Hex Bolt Assy	4	1-57	O-Ring 12x2	4	1-88	Staight spraying Tube Assy	1
1-26	Gear Box	1	1-58	Joint	2	1-89	Fan Like Spray Rod Assy	1
1-27	Bearing 6000	3	1-59	O-Ring 16x3	1	1-90	Bent Spraying Tube	1
1-28	Gear	1	1-60	Seat,Overflow Valve	1	1-91	Filter Bowl	3
1-29	Shaft Of Smaller Gear	1	1-61	O-Ring 18x2.5	1	1-92	Spraying Plate	3
1-30	M6x20 Hex Bolt Assy	2	1-62	M6x50 Hex Bolt Assy	4	1-93	Spraying Lid	3


Fig 2. Engine Parts

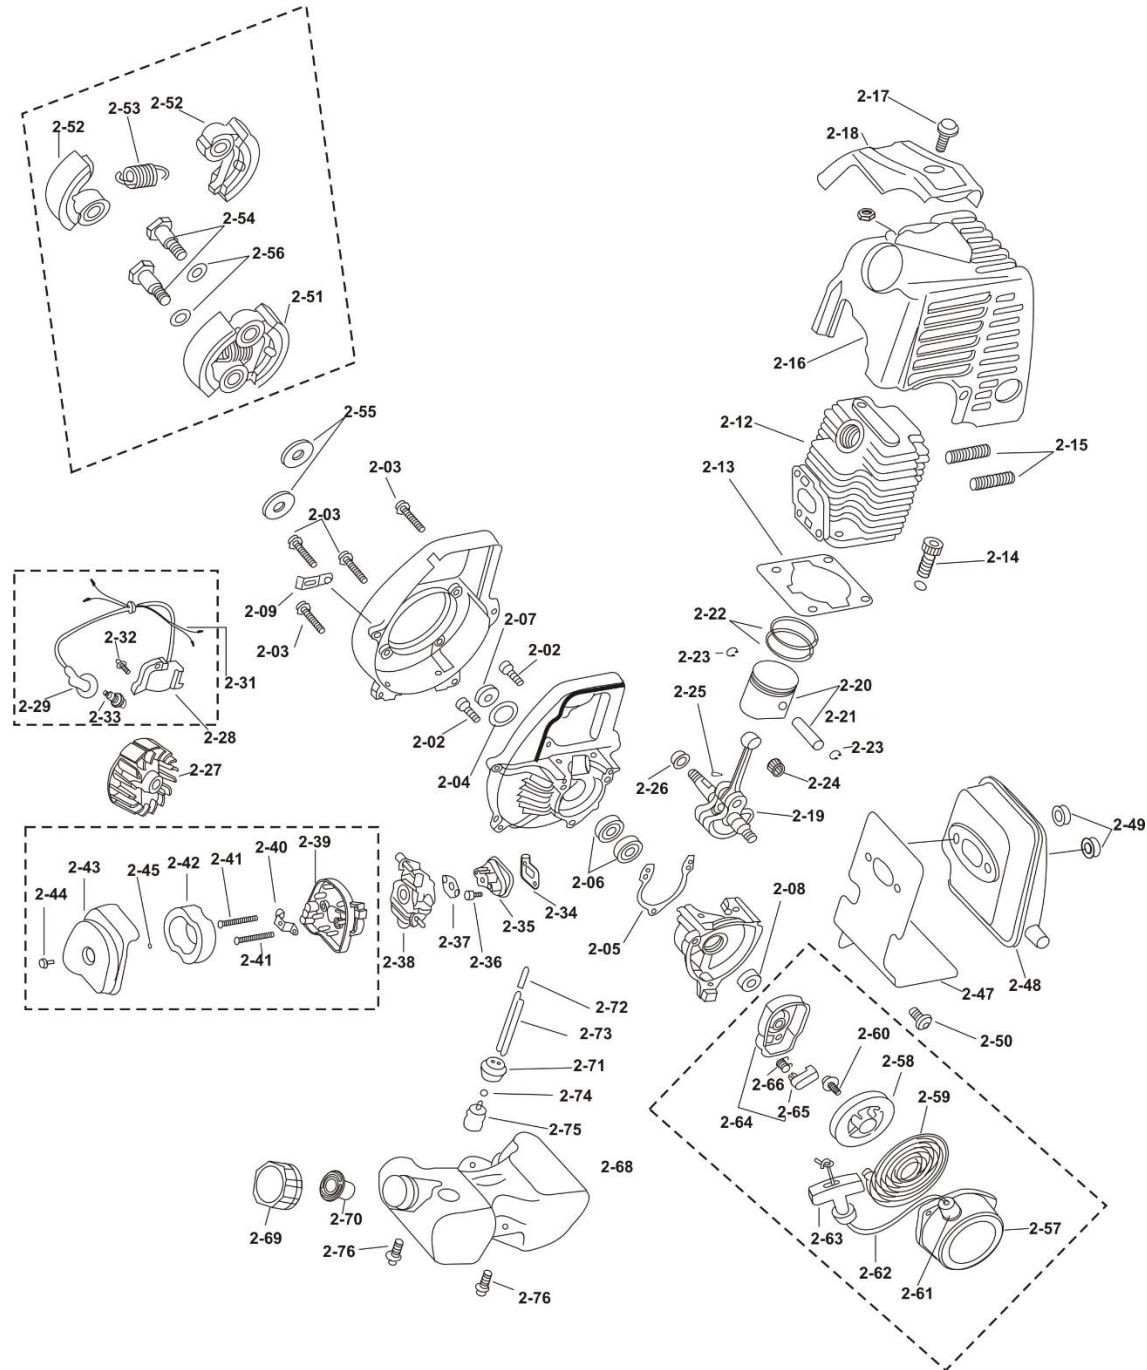

附图一:动力喷雾机零件编号图解对照表

ITEM 序号	PARTS NO. 零件编号	零件名称	PARTS NAME	Q'TY 用量	ITEM 序号	PARTS NO. 零件编号	零件名称	PARTS NAME	Q'TY 用量	ITEM 序号	PARTS NO. 零件编号	零件名称	PARTS NAME	Q'TY 用量
01					32	B25-035	齿轮箱盖	Gear Box Cover	1	63	B25-058	回水下塞	Under Metal	1
02	B25-008	透气海棉	Sieve	1	33		6m/m角垫	Shake-Proof Plug 6m/m	1	64		回水弹簧	Spring	1
03	B25-009	桶盖透气塞	Cowl	1	34	B25-023	泵支撑架		1	65				
04	B25-003	加水盖	Hood	1	35	B25-034	偏心轴	Shaft, Eccentric	1	66		油封条13×2	O-Ring 13×2	1
05	B25-010	加水盖垫圈	Seal	1	36		轴承(6004)	Bearing (6004)	1	67	B25-057	调压杆	Regulating Screw	1
06	B25-006	滤网盘	Sieve Filling	1	37	B25-048	汽缸室	Cylinder	1	68	B25-051	回水座	Overflow Body	1
07	B25-001	桶身	Water Tank	1	38	B25-049	灰盖	Cover Dust	1	69		调节垫	Fy Nut	2
08	B25-011	背带组件	Back Belt	1	39	B25-036	含油轴承固定座	Bush Plunger	2	70	B25-052	调压盘	Adjusting Pan	1
09	B25-004	右支撑架	Right Bracket	1	40		水封	Water Seal	2	71		Φ8平垫	Φ8 Washer	1
10	B25-005	左支撑架	Left Bracket	1	41	B25-038	水封座	Seal, Water Seal	2	72		M8弹簧垫	M8 Spring, Washer	1
11		6mm角垫	Shake-Proof Plug 6mm	3	42		油封条28×2	O-Ring 28×2	2	73		M8螺母	M8 Nut	1
12	B25-013	引擎固定片	Engine Seat	1	43	B25-044	活塞	Water Seal	2	74		5/8管束	5/8 Clamp, Hose	4
13					44		油封条26×2	O-Ring 26×2	2	75		回水水管	Overflow Hose	1
14	B25-014	后角垫固定螺母	Nut	1	45	B25-042	汽缸套	Cylinder Bushing	2	76		回水管弹簧	Overflow Spring	1
15	B25-002	底座	Chair	1	46	B25-046	水封固定片	Water Seal Box	2	77		进水水管	Suction Hose	1
16		加油线	Way	1	47	B25-045	螺丝套管	Tube, Screw Bush	2	78		进水管弹簧	Suction Spring	1
17	B25-015	垫圈	Washer	1	48	B25-043	水封固定片(有孔)	Water Seal Box	2	79	B25-053	进水接头	Joint	1
18	B25-016	放水栓	Water Cock	1	49	B25-032	小齿轮	Shaft of Smaller Gear	1	80	B25-055	进水塞头	Plug Hole	1
19	B25-017	桶身固定片	Coupling Metal	1	50		M5×30半圆头螺丝	M5×30 Scrw	2	81		油封条35×2.5	O-Ring 35×2.5	2
20	B25-018	背垫	Pad Cushion	1	51	B25-041	活门上塞	Valve seat	2	82	B25-047	柱塞	Plunger	1
21	B25-019	停止开关	Stop Switch	1	52		油封条26×2	O-Ring 26×2	2	83		水封座组	Water Seal Seat Assy	2
22	B25-020	加油开关座	Lever Seat	1	53	B25-040	活塞下塞	Stop-per	2	84		胶管组件	Rubber Tube Assy	1
23	B25-021	加油开关	Lever	1	54	B25-039	活门弹簧	Spring Valve	2	85		垫圈	Washer	4
24	B25-031	Φ54离合器鼓	Φ54 Clutch Drive	1	55	B25-054	出水压力室	Discharge Metal	1	86		手把	Handle	1
25					56	B25-050	回水压力室	Overflow Metal	1	87		截止阀	Valve	1
26	B25-030	齿轮箱	Gear Box	1	57		油封条12×2	O-Ring 12×2	4	88		直喷杆组合	Staight spraying Tube Assy	1
27		轴承6000	Bearing 6000	3	58	B25-060	接头	Joint	2	89		长喷头	Long Nozzle	1
28	B25-033	大齿轮	Gear	1	59		油封条16×3	O-Ring 16×3	1	90	B25-085	弯喷杆焊合	Bent Spraying Tube	1
29					60	B25-059	回水阀座	Seat, Overflow Valve	1	91	B25-083	过滤网	Filter Bowl	3
30					61		油封条18×2.5	O-Ring 18×2.5	1	92		喷片	Spraying Plate	3
31		轴承(6001)	Bearing(6001)	1	62					93	B25-084	喷头帽	Spraying Lid	3

Fig 3. CARBURETOR

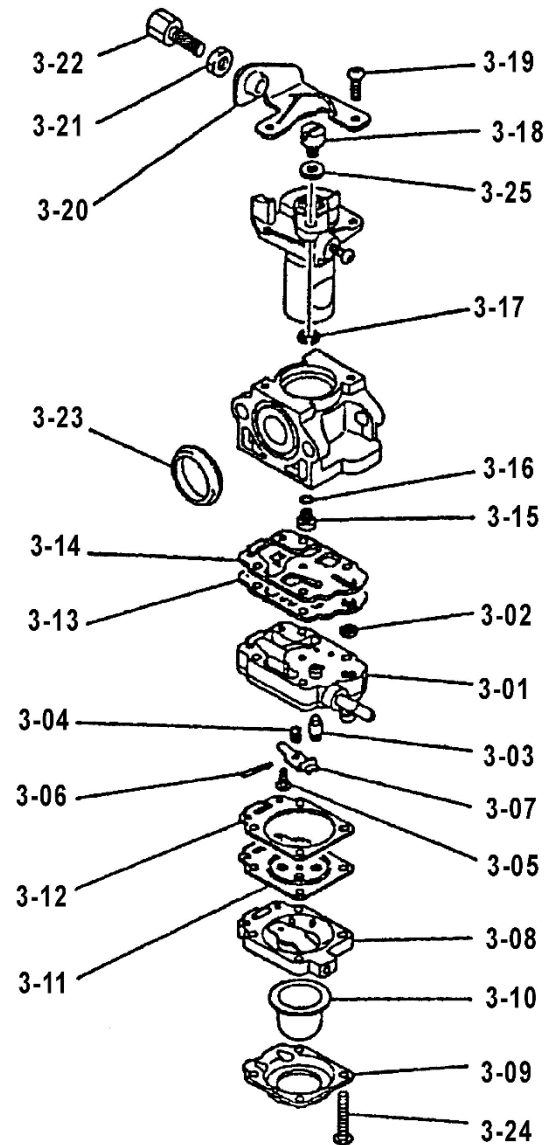

ITEM	PARTS NAME	QTY
3-01	BODY, PUMP	1
3-02	SCREEN	1
3-03	VALVE, NEEDLE	1
3-04	SPRING	1
3-05	SCREW	1
3-06	PIN	1
3-07	LEVER	1
3-08	BODY	1
3-09	COVER	1
3-10	PRIMER PUMP ASSY	1
3-11	DIAPHRAGM	1
3-12	GASKET	1
3-13	DIAPHRAGM	1
3-14	GASKET	1
3-15	JET, MAIN	1
3-16	O-RING	1
3-17	CLIP	1
3-18	HOLDER, WIRE	1
3-19	SCREW	2
3-20	BRACKET	1
3-21	NUT	1
3-22	SCREW	1
3-23	PACKING	1
3-24	SCREW	2
3-25	WASHER	1